




# **E4** Touch Panel

(RGBW)



Manual www.ltech-led.com

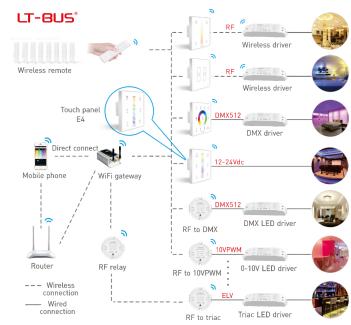

#### **Product Features**

LTECH

- 2 in 1 function: RF wireless control and PWM power output.
- · Power output, lamps can be connected directly, easy and convenient.
- . Touch keys with chord and LED indicator.
- Save any scene you like, touch 1 key to recall scene, easy and convenient.
- Adopts capacitive touch control technology on the full color slider, makes LED color selection more user-friendly.
- Touch panel can be controlled by remote directly or smart phone if add a gateway.

## Technical Specs

#### E4 RGBW Touch Panel

Input Voltage: 12-24Vdc

Current Load: 3A×4CH Max. 12A

Output Power: [0~36W...72W]×4CH Max. 288W

Wireless Frequency: RF 2.4GHz

Working Temp.: -20°C~55°C

Dimensions: L86×W86×H36(mm)

Package Size: L113×W112×H50(mm)

Weight(G.W.): 225g

# FC CE RoHS (warranty) 5 years)

 
## Key Functions:






When blue status light of ① key is on, long press ① to turn on/off buzzer. When white status light of ② key is on, long press ② to match code. Panel's 2 scene-mode keys are corresponding with WiFi-106 gateway APP's 1 & 2 scene-mode key, the scenes can be changed by APP or panel.


#### Terminals:



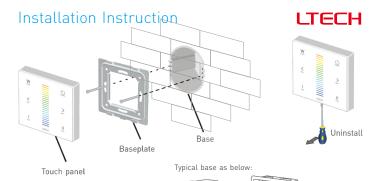


### **Product Size**

 Unit: mm





European style

 

86 size

# Wiring Diagram









### Application Composition



## Match Code Sequence



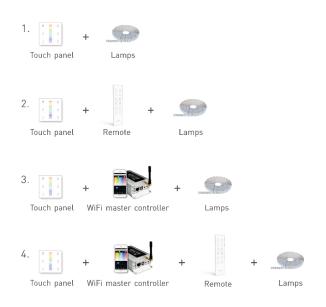

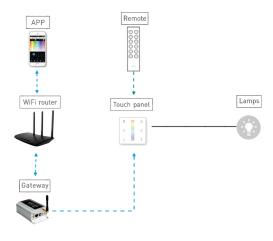

 $\ensuremath{\bigstar}$  PS: No WiFi router needed when gateway work with phones directly.

#### Match Code Sequence

- Configure gateway with touch panel, which enables the smart phone to control lamps via gateway.
- 2. Configure remote with touch panel, which enables remote to control lamps.

### RF Wireless Wiring



Single Zone Control


RGBW LED Strip

RGBW LED Strip

LE4

Single Zone Remote F4

#### Multiple Zones Control

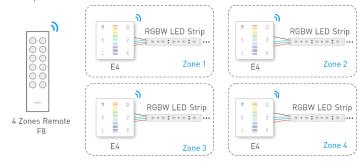

st Touch panels can be sync controlled by multi remotes, Please refer to the manual of remote's usage.

#### Match Code between Touch Panel & Remote



1

Long press () on touch panel until all status lights flicker.



2.

Press any key on F4 remote (or the matching zone key on F8), the status light stop flicking, match successfully.



## Match code between touch panel & gateway

1.

Long press  $\circlearrowleft$  on touch panel until all status lights flicker.



2

Click the corresponding RGBW zone on mobile phone, then touch the color screen, match successfully.



#### Clear code:



Press I  $\,$  II on touch panel simultaneously for 5 seconds, the status light flicker several times, clear code successfully.

 $\ensuremath{\bigstar}$  Please match/clear code when panel is on (white status light of  $\circlearrowleft$  key is on).